 


User Manual

AW-V80



Important safety instructions

- 1. Please do not place device near any form of heat sources.
- 2, Please use the accessories specified by the manufacturer.
- 3, Please refer all servicing/ repairs to a qualified personnel should there by any form of damage to the device.
- 4, Keep this user manual for future reference/ troubleshooting.
- 5, Please read ALL safety cautions.

Safety cautions

- 1, Always keep device away from fire and heat sources.
- 2, Do NOT attempt to disassemble or alter the device.
- 3, Do NOT expose device to excessive heat (direct sunlight etc.).
- 4, Do NOT put device into any form of liquids.

The above playback & charging times are estimated values testes in a practical environment and may vary upon individual usage habits.

Product specifications

Multiple Compatibility with MP3, Phone, Pad, Desktop/laptop

Feature: Portable, Wireless, AC powered

AC Voltage: 110-240V 50-60Hz

BT Version: V5.0 Power Output: 80W

Impedance: 4Ω

Frequency Response: 60Hz - 23KHz

S/N Ratio: ≥80dB

Sensitivity: 400MV

Supports: BT, AUX, USB

Supported Profiles: MP3, WMA, WAV, FLAC

 
Transmission Distance (Estimated): 10 Meters (No Obstacles)

DC Input Voltage / Current: 5V DC,1/2A

Battery: 7.4V / 6000mAh

Playback Time: 4-5 hours Charging Time: 4-5 hours


Top Control Panel



1.AUX OUT

- 2. Charging indicator light(red while charging, green when battery full charged)
- 3. Master volume knob
- 4. Bass adjustment knob
- 5. Treble adjustment knob
- 6.AC power indicator
- 7. Source button
- 8. Provious song
- 9.Next song
- 10.Play/Pause button
- 11.Power ON/OFF

Back Contol panel

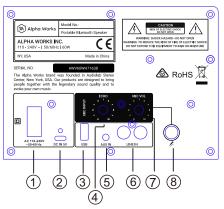


- 1.Power input AC~240V/Hz
- 2. Charging Type-C DC IN 5V/2A
- 3.USB Port
- 4. Microphone echo adjustment
- 5.AUX IN
- 6.RCA LINE IN
- 7. Microphone volume
- 8. Microphone socker

Playback sources

USB playback: insert USB into USB port, playback will start automatically.

AUX playback: disconnect all BT devices before inserting AUX cable and connect it to audio source to start.

 Connecting the product



- 1, Turn on Bluetooth(BT) on your mobile device.
- 2, Turn on the speaker.
- 3, Search and connect to "AW-V80" from your mobile device.
- 4, Press and hold Play/ Pause button for 3-4 seconds to disconnect.

Battery & Charging

Charging the speaker:

Connect Type-C charging cable to the speaker and a suitable power source.

Approximate charging time :4-5 hours

Pease fully charge up the speaker prior to first-time usage.

Troubleshooting

Unable to connect to device:

- 1, Please essure the speaker is not connected to other devices.
- 2, Please ensure the speaker is within 10m from the device.

Not sound is coming out of the speaker:

- 1, Please ensure your device is connected to the speaker.
- 2, Please ensure the music volume is at an audible level on both your mobile device and speaker.